

INSTALLATION GUIDE

Contents (parts per pack):

- | | |
|-----------------------------|-----------------------------|
| 2 x Polyurethane bushes | 2 x Stainless steel inserts |
| 2 x Stainless steel sleeves | 2 x Steel washers |
| 1 x Grease | |

Please read the complete fitting instructions and check package components before fitment.

These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*

All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original bush from the bearing housing bracket.
2. Clean any dirt and corrosion from the bore in the bearing housing bracket, making sure to remove any sharp edges from the bore.
3. Insert polyurethane bush into bore, with top hat face facing towards the front of vehicle. The top hat lip should be placed flush with the bearing housing bracket.
Note: The bush will only insert comfortably in one orientation.
4. Apply grease into bore of the bush.
5. Fit the stainless steel sleeve into bush, so that it fit flush with bottom of the bush.
6. Fit the stainless steel insert into top of bush, with the rim flush with the top of the bush.
7. Place the steel washer against bottom of the bush.
7. Re-fit to the car. Tension all hardware to manufacturers recommended torque settings.

