

INSTALLATION GUIDE

Contents (parts per pack):

- 1 x Polyurethane Insert A
- 1 x Polyurethane Insert B

Please read the complete fitting instructions and check package components before fitment.

These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
 - all safety precautions adhered to;
 - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the transmission mount from vehicle.

2. Remove attached plate from mount.

3. Clean any dirt and corrosion from voids in the transmission mount.

4. Fit polyurethane A insert into the transmission mount on the topside of mount, as shown in *Figure 1*.

5. Fit polyurethane B insert into the transmission mount on the bottom side of mount, as shown in *Figure 1*.

6. Refit original plate to transmission mount with original bolts.

7. Re-fit transmission mount to the vehicle. Tension all hardware to manufacturers recommended torque settings.

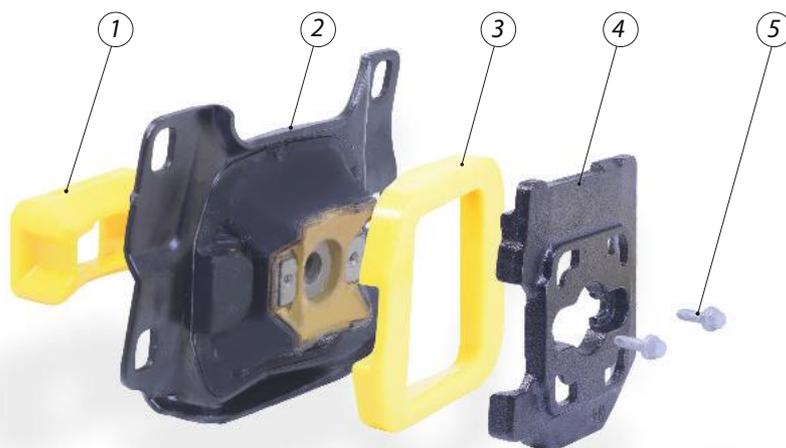


Figure 1: Exploded Assembly

1	Polyurethane Insert B
2	Transmission mount
3	Polyurethane Insert A
4	Transmission mount plate
5	Original Bolts



Figure 2: Fitted Assembly