

### INSTALLATION GUIDE

#### **Contents (parts per pack):**

2x 'A' Polyurethane parts      2x 'B' Polyurethane parts  
2x Stainless steel sleeves      1x Grease

*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*

*All fasteners must be tensioned to manufacturer's torque settings.*

#### **Fitting Instructions:**

1. Remove the original bush from the front lower arm. Fig A.
2. Clean any dirt or debris from the arm bore. Fig A.
3. Fit new bushes into the arm with part 'A' from outside (Front of the car) and part 'B' from inside (Rear of the car) of the arm. Fig B.
4. Apply some of the supplied grease into the bore of the bushes and push stainless steel sleeve into the bore. Fig B.
5. Refit arm onto the car and tension all hardware to manufacturers recommended torque settings.

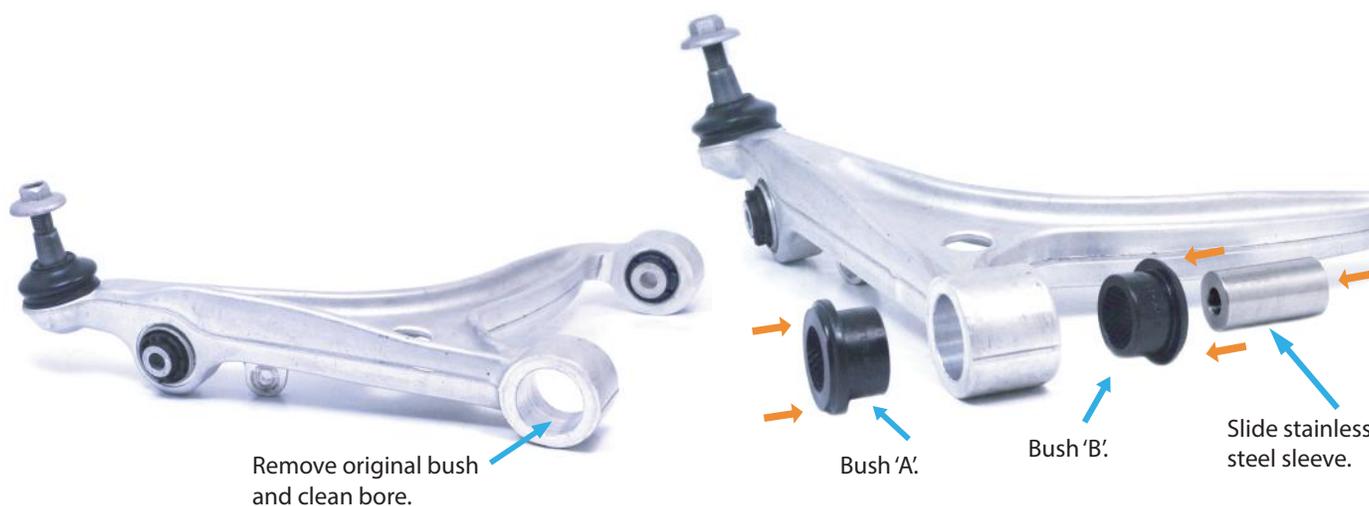


Fig A.

Fig B.