

INSTALLATION GUIDE

Contents (parts per pack):

2x A Bush 2x B Bush 2x Stainless Steel Sleeves 1x Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual. It is recommended that:

- all work to be carried out by a licensed technician;
 - all safety precautions adhered to;
 - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove front lower arm from the car and take out the original front bush from the arm. Fig A.
2. Make sure to clean any dirt or debris from the surface of the shaft, as a clean consistent surface is very important for a correct and proper fitment. Fig A.
3. Insert Bush 'A' into the metal sleeve first and then fit bush and sleeve on the arm shaft. Fig B.
Do NOT fit bush 'A' on shaft first and then slide metal sleeve over it.
4. Insert bush 'B' into the arm bracket. Apply some of the supplied grease on the inner surface of 'B' bush and fit bush on the metal sleeve. Fig C.
5. Refit the trailing arm to car and tension all hardware to manufacturers recommended torque settings.



Clean shaft Surface.

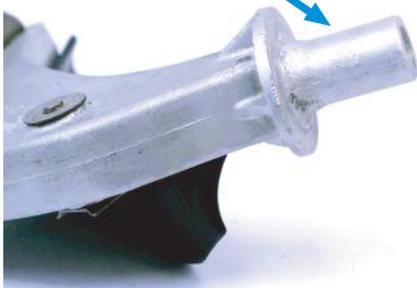


Fig A.

Insert bush 'A' into metal sleeve

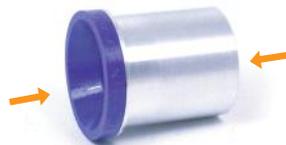


Fig B.

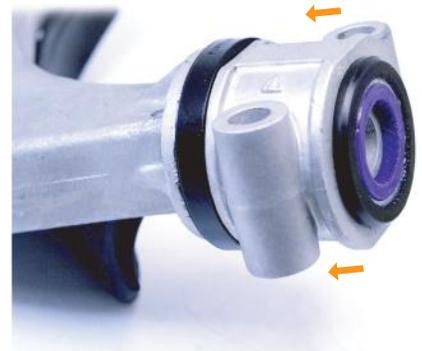


Fig C.