



PART NUMBER

**PFF60-801**

DESCRIPTION

**FRONT ARM FRONT BUSH**

### INSTALLATION GUIDE

#### **Product description:**

This polyurethane bush fits into the front position of the front arm.

It is designed to complement PFF60-802 that fits into the rear position of the same arm.

#### **Contents (parts per pack):**

- 2 x Polyurethane A bushes
- 2 x Polyurethane B bushes
- 2 x Zinc plated steel shells
- 2 x Stainless steel sleeves
- 1 x Grease



*Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.*

*It is recommended that:*

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.


*All fasteners must be tensioned to manufacturer's torque settings.*

#### **Fitting Instructions:**

1. Remove the original rubber bush from the arm, clean any dirt and corrosion from the bore in the arm.
2. Press the outer shell into the arm from the rear of the car, until the smallest diameter meets the end of the flat face of the arm.
3. Push the A bush into the outer shell from the front of the car. Push the B bush into the outer shell from the rear of the car.
4. Apply some of the supplied grease to the bore of the bush and insert the sleeve into the bush.
5. Refit the arm to the car and tighten all hardware to manufacturer's recommended torque settings.



Sleeve flush with face of arm

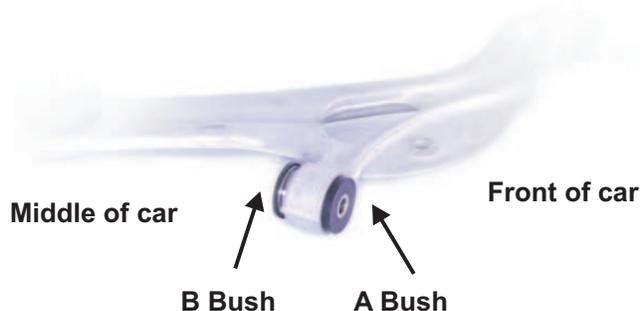

Middle of car

Front of car

B Bush

A Bush