

INSTALLATION GUIDE

Contents (parts per pack):

- 1 x Polyurethane bush
- 1 x Stainless steel sleeve
- 1 x Grease

Please read the complete fitting instructions and check package components before fitment.

These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;*
- all safety precautions adhered to;*
- wheel alignment to be checked and adjusted as required after any suspension work.*

All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove original bush from of bracket.
2. Clean any dirt and corrosion from bore, use a file to make sure no sharp edges are left around hole.
3. Fit the polyurethane bush into bore of bracket with void aligned as shown in *Figure 1*.

Note: To ease insertion use a lubricant i.e washing up liquid and push bush in at a slight angle.

4. Apply some supplied grease in and around the bore of the polyurethane bush.
5. Insert stainless steel sleeve into bore of polyurethane bush.
5. Ref t bracket. Tension all hardware to manufacturers recommended torque settings.

Figure 1: Assembly Alignment

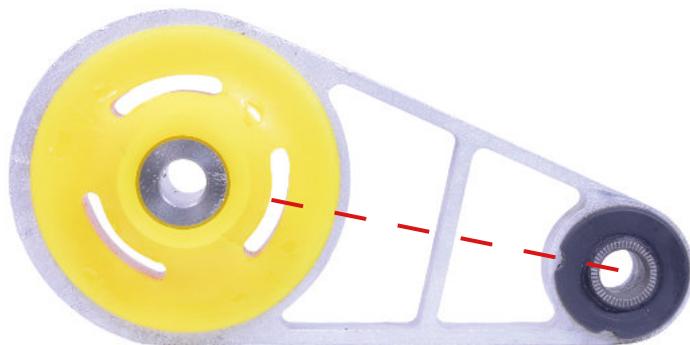


Figure 2: Assembly View

