

INSTALLATION GUIDE

Contents (parts per pack):

- 1 x Polyurethane Insert
- 1 x Steel Washer

Please read the complete fitting instructions and check package components before fitment.

These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:


- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.

All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the gear box mount from the car and undo the mount bracket Fig 1. (5) to access the voids within the mount.
2. Remove any flash lines from inside the voids and clean any dirt and corrosion.
3. Slide polyurethane insert in voids of the gear box mount.
4. Locate the supplied washer as show in Fig 1. and re-fit the bracket to the mount.
5. Re-fit the gear box mount to the car and tension all hardware to manufacturers recommended torque settings.

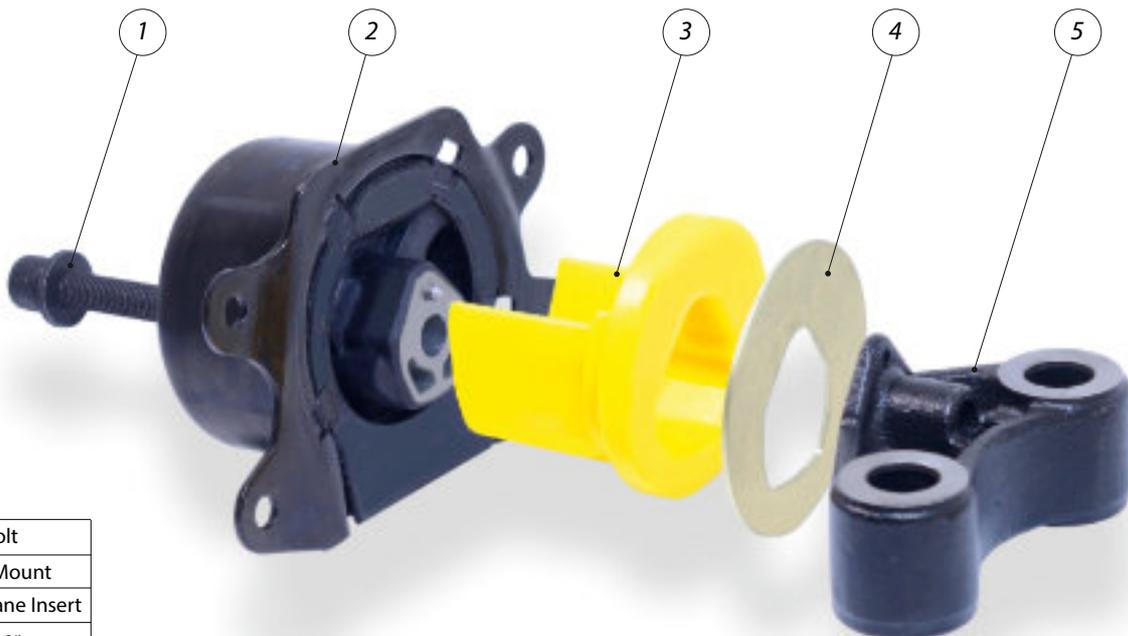

1	Original Bolt
2	Gear box Mount
3	Polyurethane Insert
4	Steel Washer
5	Mount bracket

Figure 1: Exploded Assembly