

INSTALLATION GUIDE

Contents (parts per pack):

4 x Polyurethane bushes

4 x Stainless steel sleeves

4 x Steel Washers

1 x Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual. It is recommended that:

- all work to be carried out by a licensed technician;
 - all safety precautions adhered to;
 - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove the original bushes from link rod.
 2. Clean any dirt and corrosion from the bores in the rod. Remove any sharp edges from the bores of the rod.
 3. Fit polyurethane bushes into bores of the rod.
- Note: To ease insertion, press in at a slight angle and use lubrication, i.e. washing up liquid.*
4. Apply supplied grease into bore of the bush and around top faces.
 5. Fit stainless steel sleeve into bush.
 6. Place steel washers f ush against each bush face.
 7. Re-f t arm to the car. Tension all hardware to manufacturers recommended torque settings.

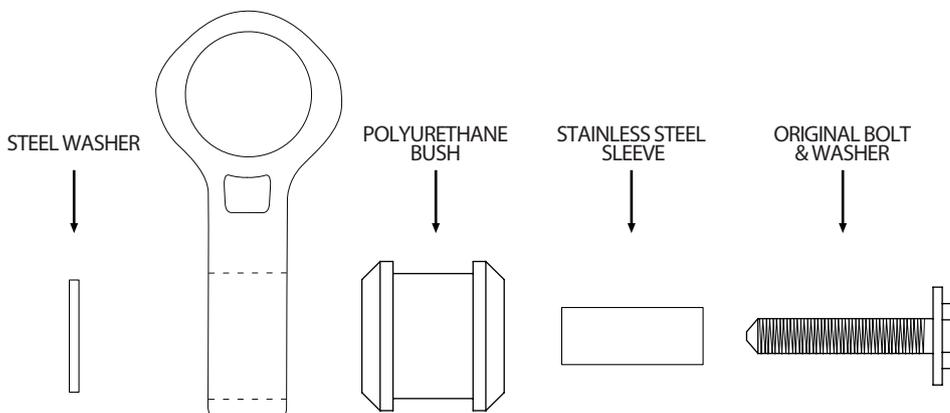


Figure 1: Assembly exploded view

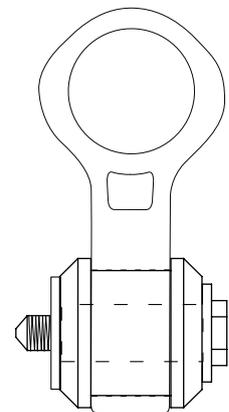


Figure 2: Assembled view