

POWERFLEX®

PART NUMBER

PFR5-1620

DESCRIPTION

Rear Axle Carrier Mount Bush

INSTALLATION GUIDE

Product description:

This part replaces OEM part number 33331118568

Contents (parts per pack):

- 2 x bushes
- 2 x metal sleeves
- 1 x grease



Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
 - all safety precautions adhered to;
 - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.*

Fitting Instructions:

1. Remove the rear axle carrier mount from the car. Before separating the rubber bush make a note of the void positions in the bracket. Fig A.
2. Remove the rubber bush from the metal mount and clean any residue rubber and rust from inside the mount. Fig B. (The original bush will need to be cut or burnt out)
3. Push the new bushes into the metal mount, aligning voids with original voiding. Fig C.
4. Apply some of the supplied grease to the bore of the bushes and insert the sleeve.
5. Re-fit the rear axle carrier mount to the carrier and tension all hardware to manufacturers recommended torque settings.

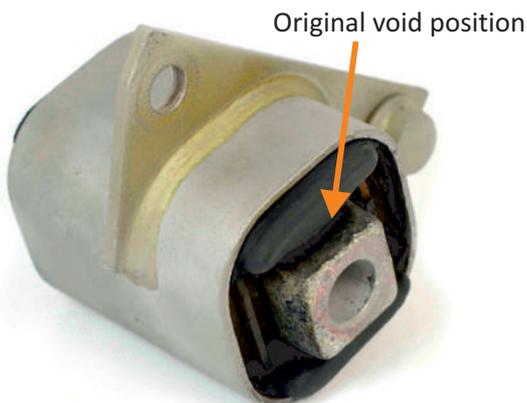


Fig A



Fig B

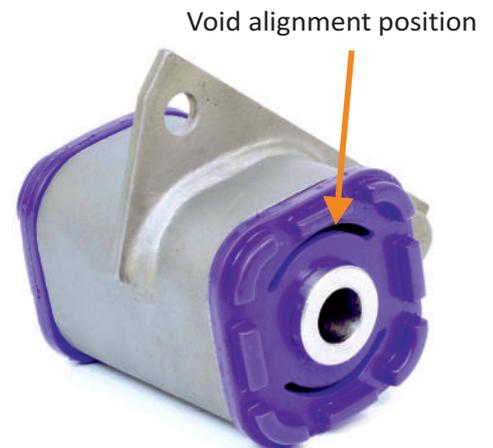


Fig C