

INSTALLATION GUIDE

Contents (parts per pack):

4x Bushes

4x Stainless Steel Sleeves

4x Washers

1x Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual. It is recommended that:

- all work to be carried out by a licensed technician;
 - all safety precautions adhered to;
 - wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.



Fitting Instructions:

1. Remove rear anti roll bar link rod from the car.
2. Take out the original bushes from the link rod. Fig A.
3. Clean any dirt and debris from the inside surface of the link rod bores.
4. Fit new bushes into the bores. Apply some of the supplied grease on the inner surface of bush and insert supplied stainless steel sleeves into the bores of the bush.
5. Use the supplied washers while fitting the original bolts and nuts. Fit the washers from the inside of the link rods. Fig C.
6. Refit link rod to car and tension all hardware to manufacturers recommended torque settings.

Fig A.

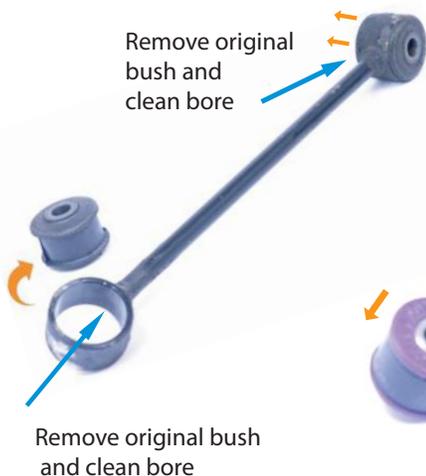


Fig B.

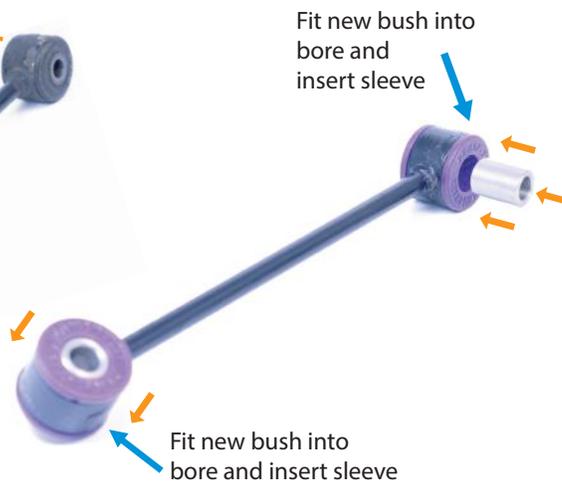


Fig C.

